

A332/A333

CMD DUTIES

- initiate preparation / evacuation
- assist and direct
- check all pax out
- leave via aft doors



COPILOT DUTIES


- open forward doors if required
- leave via forward doors
- assist and direct PAX on ground
- direct them away from aircraft
- Consider to take mobile phone
- NOTOC, loadsheet



DOORS / EXITS

COCKPIT WINDOWS

- open window
- throw escape rope through either window
- sit on window frame, head out
- lower head and upper body, then turn legs down towards the ground

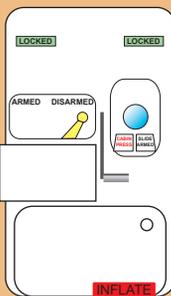

ENTRANCE / SERVICE DOORS 1, 2 & 4

- YELLOW door selector
- slide container at bottom
- door release button
- slide package may be removed and inflated at another door

EMERGENCY OPENING

- check selector in ARMED
- check outside conditions
- grasp handle and move up to open door fully
- pull MANUAL INFLATION
- check slide properly inflated, 4-6sec
- start evacuation


SLIDES / RAFT

In case of ditching:

- board slide in attached mode
- lift flap and pull disengage handle
- to release mooring line, pull manual release handle in pouch on the top of the raft, or cut mooring line
- move away from aeroplane
- tie up with other rafts
- launch sea anchor
- erect canopy

double slide / raft

CABIN EMER EXIT DOOR 3

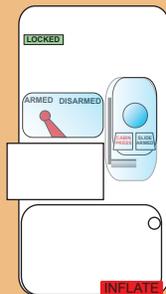

- RED door selector under cover
- slide container at bottom
- door release button
- SLIDE can be used as floatation device but not as a raft

EMERGENCY OPENING

- check selector in ARMED
- check outside conditions
- grasp handle and move up to open door fully
- pull MANUAL INFLATION
- check slide properly inflated, 4-6sec
- start evacuation

EQUIPMENT

OXYGEN BOTTLES

Working: 120lt HI
First Aid: 310lt HI/LO(infant)

OPERATION

- Connect mask to outlet
- open ON/OFF knob
- secure bottle, check flow
- put mask on
- time check
- inform CMD

OXY no longer required:

- take mask off
- close ON/OFF knob
- disconnect mask
- store equipment
- inform CMD
- entry into aircraft log

DURATION (120/310lt)

- LOW (2lt/min) 60/155min
- HIGH(4lt/min) 30/75min

PBE

OPERATION

- Remove cover, take PBE out
- Pull red tag to open bag
- place hands inside, visor down
- pull PBE over head
- make sure neck seal fits
- pull both straps sharply forward
- pull straps backward

MALFUNCTIONS

- Starter candle fails:
 - lift neck seal, inhale deeply, release neck seal and exhale
- Smoke inside PBE
- check proper fit of neckseal
- Tear in the neckseal or hood
- put another PBE
- Misting visor
- adjust oronasal mask cone

VHF TRANSCEIVER

OPERATION

- for 121.5:
- check 121.5 selected
- pull out antenna
- press to talk when com established or on request:
- remove freq selector cover
- change to 123.1
- replace selector cover
- check 123.1 is visible
- press to talk

DURATION

about 35 hours
RANGE ~90NM for a/c at 10'000ft

FIRE EXTINGUISHER

OPERATION

- Lift carrying handle
- press down safeguard
- keep extinguisher upright
- depress trigger
- empty at once at base of fire
- after extinguished, cool with liquid
- distance 2 to 1.5 meters
- discharge time 7 seconds

There is a pair of fire gloves with each extinguisher

BEACON

- fix mooring line first

ANTENNA

Self erecting at sea
Manually on land

FREQUENCY

121.5, 243 and 406.025MHz

DURATION

about 50 hours

ACTIVATION

in salt water: 5 sec
other liquids: up to 5 min.

DEACTIVATION

lay beacon horizontally

